 
 


# English Guide

## Part Names

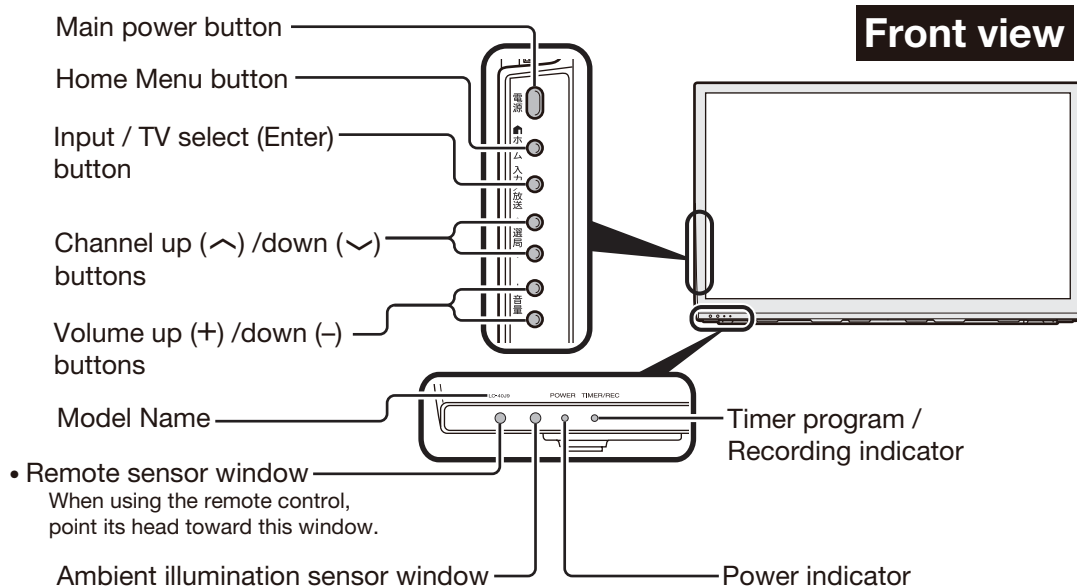

### Back view

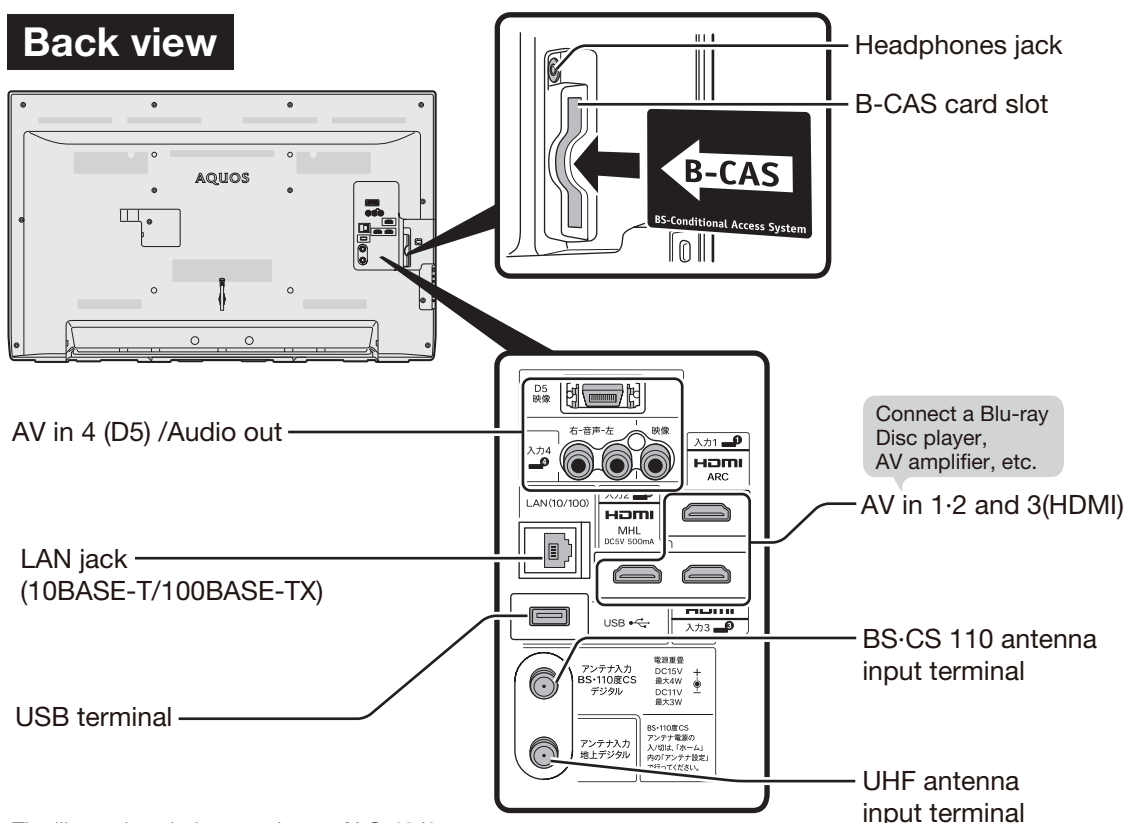

The illustrations below are those of LC-40J9.  
LC-32J9 has the same layout of jacks and terminals as LC-40J9.

もくじ／ご注意／各部のなまえ

使いたる／ふだんの

メニュー操作

USBメモリー

USBハードディスク

インターネット／ホームネットワーク

ファミリンクで使う／レコーダーやパソコンをつなぐ

個別設定／放送の種類について

故障かな？／エラーメッセージ

お役立ち情報（仕様や索子）

English Guide

# Remote Control Unit

## Active/Standby

Press to engage the TV set in the active or standby mode.

## Terrestrial digital select

### BS select

### CS select

データ運動

## Linked data broadcast

Press to call the data broadcast linked with the current digital TV program.

## Mute

Press to mute audio.

## Volume up (+)/down (-)

Press to adjust the volume.

## EPG

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## Display the "Home" Menu

Press to start some useful operations of the TV.

番組情報

## Program info

Press to display detailed information on the current digital program.

## Finish

Press to finish menu operation, etc.

録画消去

## Delete recording

Press to delete a title recorded on the USB-HDD.

2画面

## Split screen

Press to switch between the split screen mode and the normal screen mode.

操作切換

## Operable screen

Press to switch the operable screen when the TV set is in the split screen mode.

静止

## Freeze

Press to freeze the picture.

3桁入力

## Digital channel number input

Use to select a digital channel by entering the 3-digit channel number.

AVポジション

## AV position (Changing Pic. Quality) select

Press to select the picture/sound setting that best matches the current program.

映像切換

## Picture select

Press to select the desired picture when watching a digital multi-picture program.

画面表示

## Display

Press to display or turn off the channel call, etc.

## Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## SAVE mode

Press to change to the SAVE mode.

ファミリーリンク

## Information

Press to display AQUOS Information.

## Channel select

- Press to select a channel.
- Use to input a number for various settings.

インターネット

## Internet

Press to connect to the internet.

入選降

## Channel up (^)/down (v)

Press to select channels in the ascending or descending order.

入力切換

## Input select

Press to select the input.

## Display the Tool Menu

## Cursor (up, down, left, right)

Use to select a menu item, column, etc.

決定

## Enter/Confirm

Press to confirm a selected setting or menu item.

## Return

Press to go back to the previous screen.

青 赤 緑 黄

## Color

Use to operate EPGs and data program screens.

## Familink

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切換

## Audio select

Press to select the audio.

時計

## Clock

Press to display a large clock on the screen while watching.

字幕

## Caption

Press to display, select, or turn off captions when watching a digital program with captions.

オフタイマー

## Sleep timer

Press to select the remaining time period after which the TV set automatically enters the standby mode.

 
## To open the cover

Hold the cover by the projections on both sides and lift upwards.

# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

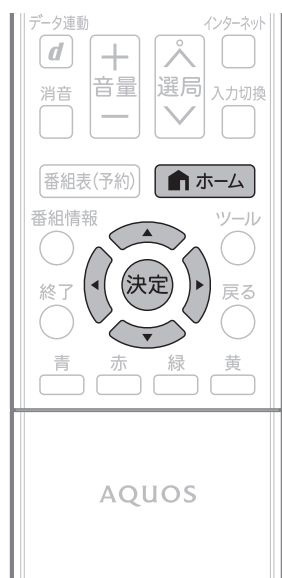

**1**  
Press  
ホーム  
and  
select  
with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



**2**  
Select  
with



Select “ (視聴準備)” (View Setting).


「 (視聴準備)」を選ぶ



**3**

 Select  
with  
決定  
Press  
決定

Select “Language(言語)”.  
「Language(言語)」を選ぶ

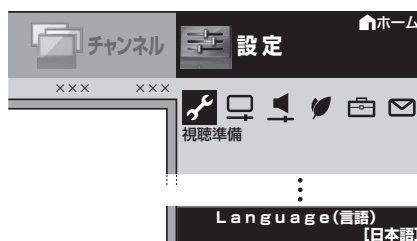

**4**

Select  
with  
決定  
Press  
決定

Select “English”.  
「English」を選ぶ

Enter.  
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

**5**

Press  
ホーム

Finish this operation.  
終了する

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

もくじ／ご注意／各部のなまえ

使いかた ぶだんの

操作 メニュー

メモリー USB

ハードディスク

インターネット／ホームネットワーク

ファミリンクで使う／レコーダーやパソコンをつなぐ

個別設定／放送の種類について

故障かな？／エラーメッセージ

お役立ち情報 (仕様や索引)

English Guide